



200 Universal Dr. • Owosso • MI 48867
989-725-8354 • Fax 989-725-8409
1-800-433-3604



Installation Kit No. LIK-13 (104)


Contents: (6) Over Rail Fastener Clips

INSTALLATION INSTRUCTIONS

Preparations:


Clean and dry the cargo box of your truck.

Place Bedliner in the Truck box

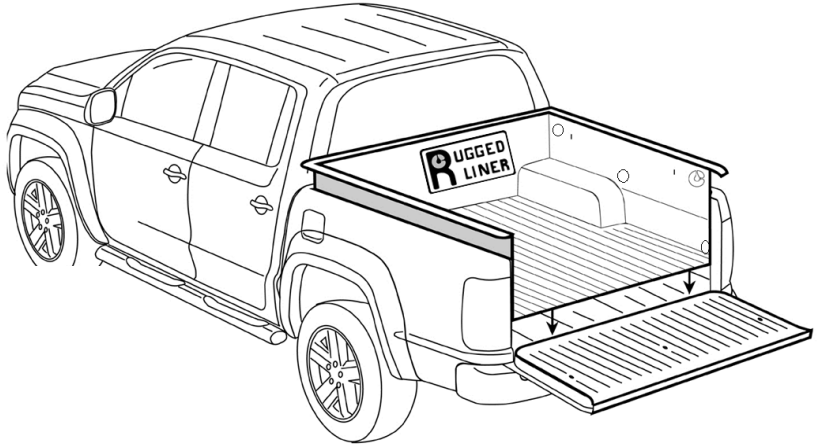

Step 1

Attach the bedliner to the truck cargo box by inserting one plastic clip through each one of the slots in the bedliner

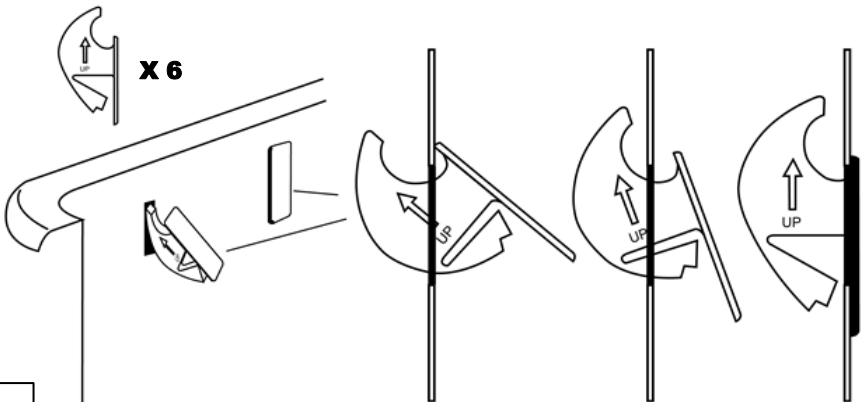

Step 2