

TRUCK BEDLINER TRAILER BEDLINER



Installation Kit No. LIK-5 (109)


Contents: (2) 2.5" Rubber Plugs

INSTALLATION INSTRUCTIONS

Step 1: Insert rubber plug into the cargo hole, smooth side facing out, by allowing the perimeter of the hole to rest in the recess of one side of the plug.

Step 2: Squeeze the plug together slightly to allow the opposite side to tuck in.

Step 3: Check for a secure fit.

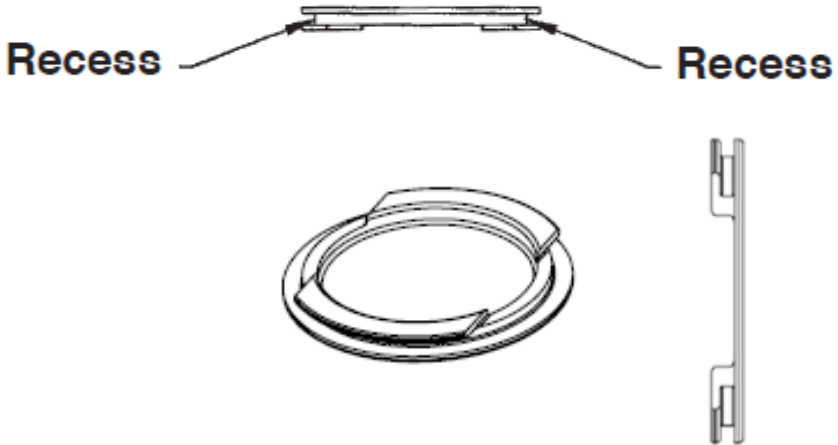

Note:

The rubber plugs should be installed after the liner has been installed into the truck bed.

It maybe necessary to remove the tie-downs to allow the plugs proper positioning