







Thule Rapid System Kit 1811

> Instructions

HONDA Pilot, 5-dr SUV, 16-

HONDA Ridgeline, 4-dr Crew Cab, 17-

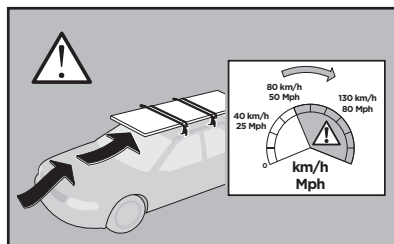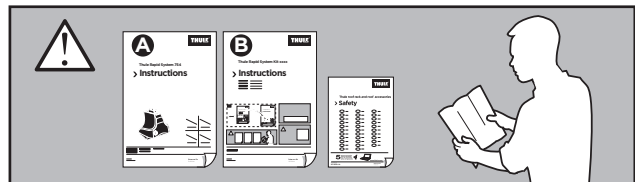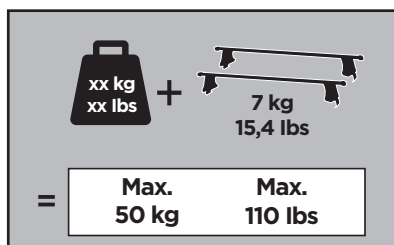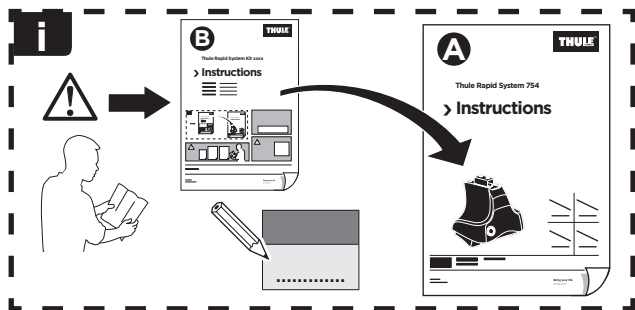


ISO 11154-E

141811
C.20160704
519-1811-02


Bring your life
thule.com



265 x2



170 x2



271 x2



660 x2






x1



x1



1

	X (scale)	X (mm)	X (inch)
HONDA Pilot , 5-dr SUV, 16-	56	1211	47 ⁵ / ₈
HONDA Ridgeline , 4-dr Crew Cab, 17-	57	1221	48

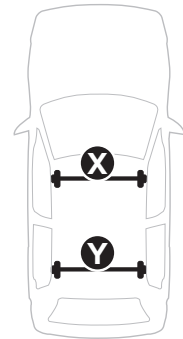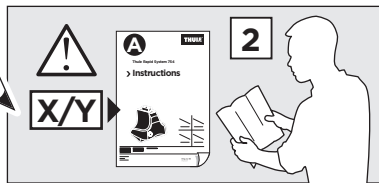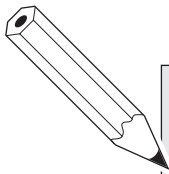


	Y (scale)	Y (mm)	Y (inch)
HONDA Pilot , 5-dr SUV, 16-	52	1171	46 ¹ / ₈
HONDA Ridgeline , 4-dr Crew Cab, 17-	52,5	1176	46 ¹ / ₄

2

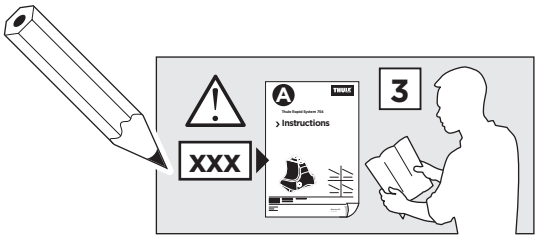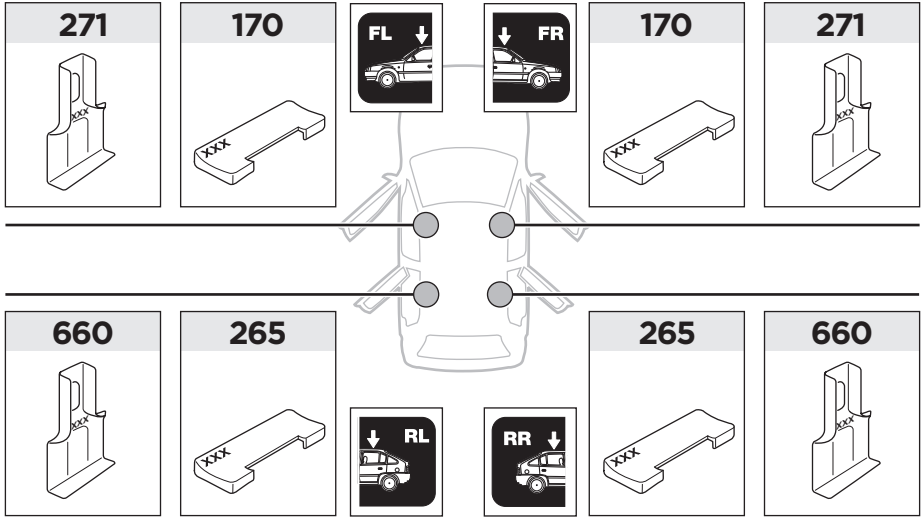

3

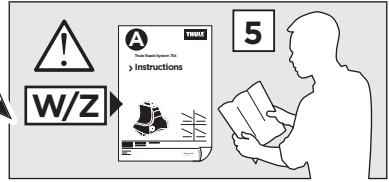

	W (mm)	Z (mm)	W (inch)	Z (inch)
HONDA Pilot , 5-dr SUV, 16-	490	790	19 1/4	31 1/8
HONDA Ridgeline , 4-dr Crew Cab, 17-	350	750	13 3/4	29 1/2

