



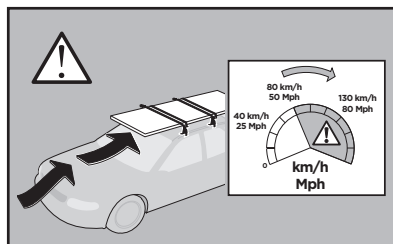

## Thule Rapid System Kit 1837

# > Instructions




- DODGE Ram, 1500, 4-dr Quad Cab, 09-
- DODGE Ram, 1500, 4-dr Crew Cab, 09-
- DODGE Ram, 2500/3500, 4-dr Crew Cab, 10-
- DODGE Ram, 2500/3500, 4-dr Mega Cab, 10-

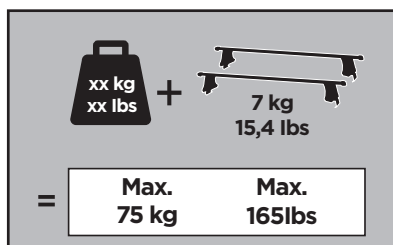

ISO 11154-E



141837  
C.20160707  
519-1837-01

Bring your life  
thule.com

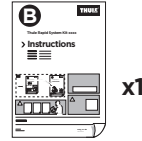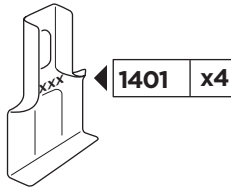

# 1

	X (scale)	X (mm)	X (inch)
<b>DODGE Ram, 1500, 4-dr Quad Cab, 09-</b>	<b>65,5</b>	<b>1306</b>	<b>51 <sup>3</sup>/<sub>8</sub></b>
<b>DODGE Ram, 1500, 4-dr Crew Cab, 09-</b>	<b>65,5</b>	<b>1306</b>	<b>51 <sup>3</sup>/<sub>8</sub></b>
<b>DODGE Ram, 2500/3500, 4-dr Crew Cab, 10-</b>	<b>65,5</b>	<b>1306</b>	<b>51 <sup>3</sup>/<sub>8</sub></b>
<b>DODGE Ram, 2500/3500, 4-dr Mega Cab, 10-</b>	<b>65,5</b>	<b>1306</b>	<b>51 <sup>3</sup>/<sub>8</sub></b>

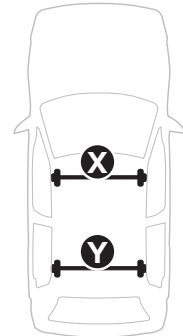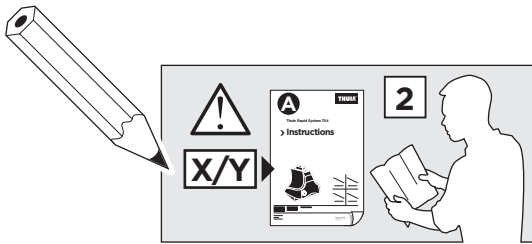

	Y (scale)	Y (mm)	Y (inch)
<b>DODGE Ram, 1500, 4-dr Quad Cab, 09-</b>	<b>65</b>	<b>1301</b>	<b>51 <sup>1</sup>/<sub>4</sub></b>
<b>DODGE Ram, 1500, 4-dr Crew Cab, 09-</b>	<b>65</b>	<b>1301</b>	<b>51 <sup>1</sup>/<sub>4</sub></b>
<b>DODGE Ram, 2500/3500, 4-dr Crew Cab, 10-</b>	<b>65</b>	<b>1301</b>	<b>51 <sup>1</sup>/<sub>4</sub></b>
<b>DODGE Ram, 2500/3500, 4-dr Mega Cab, 10-</b>	<b>65</b>	<b>1301</b>	<b>51 <sup>1</sup>/<sub>4</sub></b>



2

**DODGE Ram, 1500, 4-dr Quad Cab, 09-**


**DODGE Ram, 1500, 4-dr Crew Cab, 09-**

**DODGE Ram, 2500/3500, 4-dr Crew Cab, 10-**

**DODGE Ram, 2500/3500, 4-dr Mega Cab, 10-**

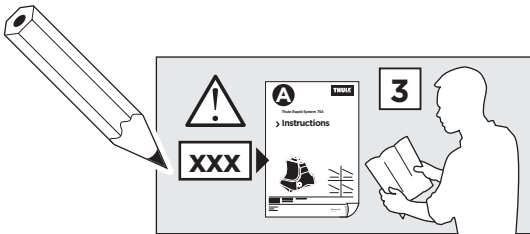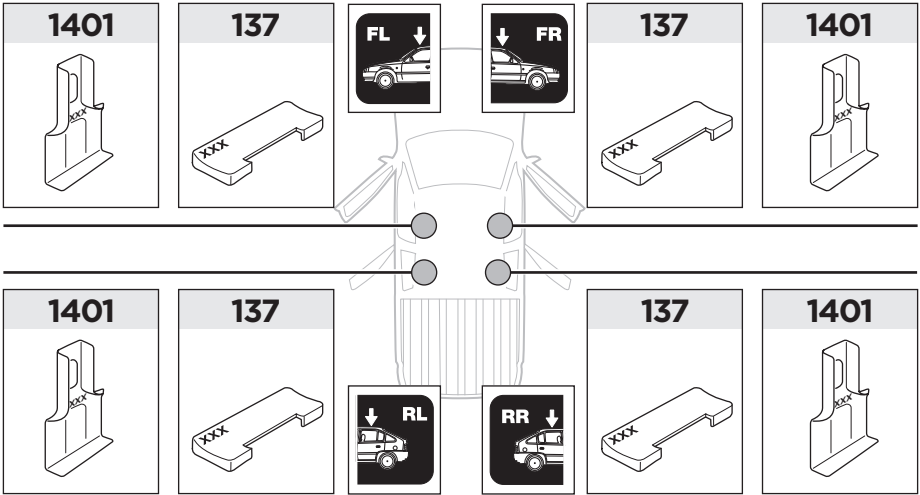

**3**

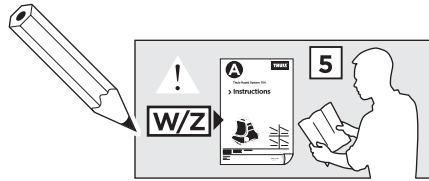

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>DODGE Ram, 1500, 4-dr Quad Cab, 09-</b>	<b>300</b>	<b>750</b>	<b>11 3/4</b>	<b>29 1/2</b>
<b>DODGE Ram, 1500, 4-dr Crew Cab, 09-</b>	<b>300</b>	<b>750</b>	<b>11 3/4</b>	<b>29 1/2</b>
<b>DODGE Ram, 2500/3500, 4-dr Crew Cab, 10-</b>	<b>300</b>	<b>750</b>	<b>11 3/4</b>	<b>29 1/2</b>
<b>DODGE Ram, 2500/3500, 4-dr Mega Cab, 10-</b>	<b>300</b>	<b>750</b>	<b>11 3/4</b>	<b>29 1/2</b>

